



# Instruction Manual

## Model: SC330



## General Information

Congratulations on your purchase of JETHRO 3G turn cell mobile phone design SC330

Please study this information for better handling the product, we assume no responsibility for the result from improper handling.

We are constantly trying to improve our services and product. Therefore Jethro reserves the right to modify any of the products changes and improvements described in this document without prior notice.

The items in this recommendations are presented "as is". Jethro takes no guarantee for the accuracy of completeness of the items in this recommendations. There may be slight variations of the images in the guidelines and the product kind, there serve as examples please make reference to the product. Some functions are dependent on system operators, for more information please get in touch with your system owner.

Please examine the provided components, determine whether the system providers, to find out more please contact your system owner.

Please look into the provided components, figure out whether the below-detailed components are all available, if one of the element is losing or broken, please speak to your supplier where you buy the phone.

Jethro SC330 contents:

- 1 Telephone (*SC330*)
- 1 Charging Station (*SC330*)
- 1 Charger (*SC330*)
- 1 Lithion-ion Battery (*SC330*)
- 1 USB Cable (*SC330*)
- 1 User Guide (English) (*SC330*)

## **Specifications:**

Quad-Band network:	3G WCDMA 850/1900Mhz 2G GSM 850/900/1800/1900Mhz
Battery	Li-ion 800mAh
Size:	101 x 50.5 x 19.5 mm
Standby time:	<200 hours*
Talk time:	<250 minutes*

## General Information

If the font is really little for you to study, please perspective a larger version recommendations on our website.

See the product support web page on our website: [www.jethroshop.com](http://www.jethroshop.com)

Device Code:

With this concept, unauthorized individuals can avoid using the product.

The producer standard Code is: 1234

PUK PIN-Code:

The system owner provides this with the SIM credit score cards to avoid the use of the money cards by unauthorized individuals.

You can allow/turn off or modify the PIN concept.

# Table of Contents

<b>My Phone</b> .....	9
LED Description .....	11
<b>Getting Started</b> .....	12
What is a SIM card? .....	12
Inserting the Sim card and Micro SD card .....	12
Inserting the battery .....	14
Charging the battery .....	15
Turning on or off the phone .....	16
Standby .....	16
Screen (Home screen).....	17
Screen Symbols.....	18
Headset/Bluetooth Modes .....	19
Menu Function .....	19
Quick access functions .....	20
Input methods.....	20
<b>Call features</b> .....	21
Call.....	21
Call using the phonebook.....	21
Call using the speed dial contacts .....	22
Answering a call .....	22
Functions during a call .....	23
Hands-free/Speaker .....	23
<b>Menu</b> .....	24
<b>Phonebook</b> .....	25
Access your phone numbers .....	25
How to enter new Contact.....	25

Edit a contact .....	26
Delete all contacts from the phonebook or SIM card.....	26
Copy all contacts from the phonebook or SIM card.....	27
Speed Dials.....	27
Own phone number .....	28
<b>Messages.....</b>	<b>29</b>
Write messages .....	29
Text input .....	29
Inbox .....	31
Draft .....	31
Outbox.....	31
Sent.....	31
Voicemail .....	32
<b>Call history .....</b>	<b>33</b>
<b>Organizer .....</b>	<b>33</b>
Alarm clock.....	34
Calculator .....	34
Calendar .....	34
Bluetooth .....	35
<b>Multimedia.....</b>	<b>37</b>
Camera .....	37
Image (Image viewer) .....	37
Video camera.....	38
Video (Video viewer) .....	39
FM Radio .....	39
My File .....	40
Audio .....	41

<b>Settings</b> .....	<b>42</b>
Profile (Sound) .....	42
<b>SOS</b> .....	<b>43</b>
How does SOS function work? .....	43
<b>SOS settings</b> .....	<b>44</b>
SOS Status (on/off).....	44
SOS numbers (contacts) .....	44
SOS SMS .....	45
<b>Phone settings</b> .....	<b>45</b>
Time and date .....	45
Language .....	45
<b>Call settings</b> .....	<b>45</b>
Flip to answer:.....	46
Call divert .....	46
Call waiting for .....	46
Call barring .....	46
<b>Display</b> .....	<b>47</b>
Wallpaper settings.....	47
Idle display settings .....	47
Contrast.....	47
Backlight.....	47
Keypad backlight .....	47
LED mode .....	47
<b>Security settings</b> .....	<b>47</b>
SIM security: .....	48
Phone security .....	48
<b>Connections</b> .....	<b>49</b>
<b>M1/M2 Direct numbers</b> .....	<b>49</b>
<b>Restore factory settings</b> .....	<b>49</b>



Troubleshooting .....	50
Battery .....	53
Phone .....	56
Safety instructions.....	58
Road safety: .....	60
Operating environment: .....	60
Electroinc devices:.....	60
Pacemaker: .....	61
Hearing aids: .....	61
Other medical devices:.....	61
Labelled sites: .....	62
Hazardous locations: .....	62
Vehicles: .....	63
Information .....	63
Information about the certification (FCC): .....	63
RF exposure information (SAR).....	65
Limitation of liability: .....	67
More information:.....	68
<b>Contact us:</b> .....	68

**IC: 11350A-SC330**  
**FCC ID: 2AAWJSC330**

Tested to comply  
with FCC certification

# My phone



Figure SC330

1	Left menu key / main menu
2	Green call button/call list <i>Call in standby mode / Ok button</i>
3	Direct dial button M1
4	* Button <i>Press this key in standby mode to enter the following characters: * /+ /P / W.</i>
5	Speaker

6	Arrow button (up): <i>Shortcut to text message in standby mode</i>
7	Arrow button (down): <i>Call the Speed dial contacts in standby mode</i>
8	Right menu button/ <i>call in standby mode of the Phonebook</i>
9	Power button ( <b>press and hold 8 seconds</b> ), ending the call, reject the call
10	Direct dial button M2
11	Camera button / Speaker switch
12	# Key / Pound <i>In the standby mode, by long pressing enable/disable the silent mode.</i> <i>In the edit mode: change the input Method</i>
13	SOS Emergency button
14	Polyphonic speaker
15	Connection for Headset (3.5mm)
16	Micro USB charger connection
17	Up Volume key
18	Flashlight <i>By long press 0 key for 3 seconds to activate / deactivate the flashlight</i>
19	Down Volume key

## LED description

White LED	Flashlight
Red LED	Low battery (flashing) / charging mode (lights up)
Green LED	Call, missed call or unread messages (voice messages)



# Getting started

## What is a SIM card?

What is a SIM card?

Each cell mobile phone needs a SIM credit score cards (subscriber identification module). Without the SIM credit score cards, you can not create phone calls. The SIM credit score cards is a microprocessor which shops their information and relationships. Deal with a map so effectively, and be careful when placing or taking out the money cards. Keep SIM credit score cards out of the reach of youngsters.

Insert the SIM credit score cards and little SD card

1. The mobile phone must be converted off and disconnected from battery energy charger.
2. Remove battery energy cover on the back of the product.




If battery energy in the product, please take it off.

2. See 2 credit score cards holders: top remaining for the SIM credit score cards and the bottom right for the little SD credit score cards.


3. Push the SIM card effectively into the SIM credit score cards port (1). Ensure that the Silver relationships of the bank credit score cards experiencing down and the beveled place is.

4. Carefully start up the microSD credit score cards port entrance, set up the microSD credit score cards into the owner (2) and then protected owner entrance.

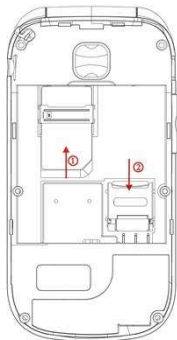

## Insert the battery

1. Align the golden relationships of battery energy with corresponding relationships of the product.
2. Press on the other end of battery energy until it locks in position.
3. Slide battery energy door so far on the device up until it clicks into position.

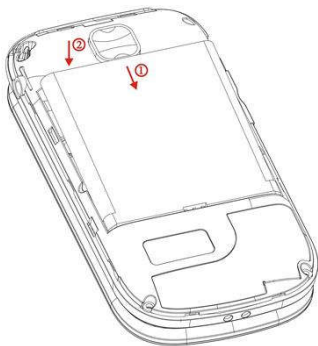

## Charging the battery

*There are two ways to price battery energy the SC330:*

*A. Charging station*

*B. Charger*

*1. Insert the connector of the charger in the product.*

*2. Connect the charger to the primary store.*

*3. Charging battery energy can take several hours. If the phone's battery energy ran out, it may take up to 30 min until the price indication seems to be on the show.*

*4. If the system is switched on, price indication will appear on the show. The indication will no longer flash when battery energy has been completely billed.*

*5. Disconnect the charger from the store and from the product if asking for is not required*

**Note:** *The initial price for battery energy should be at least 12 hours.*



## Turn on or off the phone

Make sure that the SIM card is on the phone and the battery is a charge.

1. Press **Red button** 8-10 seconds to switch the phone on.
2. The PIN-code is active if the phone asks you the PIN code, please enter it and confirm with **OK**.
3. Please select your language and confirm with **OK**.
4. Press **Red button** 4-5 seconds to turn off the phone. (Press the OK when asking for shutting down permission)

*You can only call emergency number without a valid SIM card.*

*Note: If the PIN code entered incorrectly 3 times, the phone will ask you the PUK code that you have received it together with the SIM card.*

## Standby








If the phone is not used for a short period of time, the telephone will switch to standby mode automatically. Press any key to exit this mode.





## Screen (home screen)

1	2	3
4		
5		
6		
7	8	

1. Signal strength
2. Symbols
3. Battery status
4. Network operators
5. Time
6. Date
7. Menu
8. Phonebook

## Screen symbols



	<p><b>Signal strength:</b> <i>The vertical bars show the strength of the reception of the carrier.</i></p>
	<p><b>New messages</b> <i>This symbol appears when you received a new message.</i> <i>SIM card has an unread message.</i>  <i>This sign blinks when the Inbox is full. You must delete some messages so that you can receive new messages.</i></p>
	<p><b>Headphones</b> <i>This symbol is displayed when a headset is plugged in.</i></p>
	<p><b>Missed calls</b> <i>This sign will be shown if you have missed calls.</i></p>
	<p><b>Incoming call alert</b> <i>Only ringing.</i> <i>Silent mode and vibrate.</i> <i>Vibrate and ring</i></p>
	<p><b>Call forwarding</b> <i>This symbol appears when all calls are forwarded.</i></p>

	<p><b>Alarm clock</b>  <i>This symbol is displayed when the alarm is switched on.</i></p>
	<p><b>Bluetooth</b>  <i>This symbol appears when the Bluetooth is turned on.</i></p>
	<p><b>Battery meter</b>          This character changes color depending on the status of the battery.</p> 

## Headset/Bluetooth mode

When the headset is connected (includes a Bluetooth headset), you can answer the call by pressing the key on the headset.

## Menu function

In the home screen, press the left menu button (  ) to enter the *main menu*, press the (  ) to access the *contacts*.

## Quick access functions.

Use the 2 key navigation button to enter quick access to following functions:

Button	Function
Arrow key up	<i>messages</i>
Arrow key down	<i>Speed dial numbers</i>

### **Input methods:**

- En: T9 Predictive, first letter cap then small letter
- en: T9 Predictive, all small letter
- EN: T9 Predictive, all cap letter
- Abc: Corresponding keys once per letter, first letter cap then small letter
- ABC: Corresponding keys once per letter, all small letter
- ABC: Corresponding keys once per letter, all cap letter
- 123: All number input

# Call features

## Call

1. Enter the phone number including the area code, and press the green button. International calls: enter the area code + sign by pressing of \* and the country (or regional) a preset. (If necessary, omit the 0 before the area code).
2. Press right menu key *deletes* to delete the number to the left of the cursor.
3. Press the green button to call the number.

## Call using the phonebook

If contacts in the phonebook are stored, you can make a call using the phone book.

1. To enter the phone book, press *right menu button (3-dot key)* in standby mode.
2. Use arrow keys to scroll up and down to the desired telephone number.
3. Press the *green button* to call the number.
4. Press the *red button* to cancel or end the call.

## Call by using the speed dial contacts

Press *down arrow key* in standby mode. Here you have the option to select up to 8-speed dial contacts, use the *Arrow keys* to navigate to the photo you want to contact and then press the *Call button* (green button)

**Note:** To learn how to setup speed dial contacts, please see page 27 for more details.

## Answer a call

If you receive a call and the phone rings or vibrate, you will see the number of the name on the display.

1. If you want to take the call, press the *green button* and *OK*.
2. You have the possibility to answer the call automatically by flipping open the phone, please refer to the following menu item:

**Settings-call setting-answer mode:** select "**Cover answer**" then press the *right menu button* (Done)

3. If you want to reject the call, press the *red button*.
4. You can switch the incoming call silent by pressing any button.

## Functions during a call

The following functions are available by pressing the *Options* Button during a phone call:

*Call hold:*

Place call in the queue.

*End the call\*:*

End call.

*New call:*

To make another call.

*Phone book:*

To enter the phone book.

*Call list:*

Show the call list

*Messages:*

To access the messages.

*Mute:*

To switch microphone off / on

*Note: The \* marked functions must have SIM card inserted. For more information, please contact the network operator.*

## Hands-free / Speaker:

You can enable/disable the hands-free speaker function DURING the phone call by pressing the *Dedicated Speaker button*





# Menu

## **1 Phone book**

- 1 Contacts
- 2 New contact
- 3 Own number
- 4 Memory status
- 5 Favorite contact

## **2 Messages**

- 1 Write message
- 2 Inbox
- 3 Draft
- 4 Outbox
- 5 Sent
- 6 Voice mail
- 7 Broadcast message list
- 8 Message option

## **3 Call history**

- 1 Missed calls
- 2 Dialed calls
- 3 Received calls
- 4 Delete all
- 5 Call timers

## **4 Organizer**

- 1 Alarm
- 2 Calculator
- 3 Calendar
- 4 Bluetooth

## **5 Multimedia**

- 1 Camera
- 2 Images
- 3 Video Camera
- 4 Video
- 5 FM radio
- 6 My file
- 7 Audio

## **6 Settings**

- 1 Profiles
- 2 SOS
- 3 Phone settings
- 4 Call settings
- 5 Display
- 6 Security
- 7 Connections
- 8 Direct numbers
- 9 Restore factory setting (1234)

# Phonebook

You can store up to 300 phone numbers in your SC330, and save up to 250 phone numbers on your SIM card.

## Access to your phone numbers

You have two ways to get to contacts:

1. Press the *right menu button* in standby mode.
2. Press the left *menu button* in standby mode then select *Phonebook* and confirm with *OK*

*Note:*  Symbolizes a SIM card entry

 Symbolizes a phone entry

## How to enter new contact

1. Press *Option*, select *New* then press *OK* in *Phonebook* menu.
2. Select memory place: *SIM card* or *Phone*.

*SIM card contact:* It can only store *Name* and *Number*.

*Phone contact:* It can store *Name*, *Number* and *Caller ring tone*.

**To save the *Contact*, press *Back* and *Save*.**

## **Edit a contact**

1. Choose a name, press *Options* and select *View contact* then select the field you want to edit and press *Edit*.
2. After editing the entries, in order to save the changes, press *Back* and confirm with *OK*. (Or *Cancel* if the edit was mistake)

## **Delete contacts from phonebook or SIM card**

### **- Delete single contact**

1. Select *Main menu – Phonebook*, select the contact you want to delete, then press *Options*.
2. Select *Delete* and press *OK*, then confirm with *OK*

### **- Delete multiple contacts**

1. Press *Options* in *Phonebook*, select *Delete multiple* and press *OK*.
2. Check the contacts you want to delete with the *Camera button* and press *Option*. Press *OK* another time to confirm the selection, then press *OK* again to delete selected contacts.

## **Copy contacts from phonebook or SIM card**

1. Select *Main menu – Phonebook* and press *OK*
2. Press *Options*, select *Copy* and press *OK*
3. Select *Copy from phone*, press the *Camera button*, select where copy the contacts from, *Phone or SIM*, then press *OK*
4. Select *Copy to SIM*, press the *Camera button*, select where copy the contacts too, *Phone or SIM*, then press *OK*
5. Select the contacts you want to copy, check it with the *Camera button*, press *Options*, then press *OK*.
6. You can also copy all contacts in step 5, press *Options*, choose *Mark all*, then press *Options* again and press *OK*

## **Speed dial**

1. Select *Main menu – Phonebook* and press *OK*
2. Press *Option*, select *Others* and press *OK*
3. Select *Speed dial* and press *OK*

A total of 8 numbers can be stored as speed dials. (key #2- key #9)

1. Select the desired number (2-9) and press *Options*.
2. To edit, press *Edit*.
3. Press *Phonebook*, select the desired name from the phone book and press *OK* (the desired name must already be saved under *contacts*), then press *OK* again.

After setting up the speed dials, you can press the desired speed dial number (2-9) 2 seconds in standby mode and the assigned number will be dialed.

## **Own phone number**

1. Select *Menu – Phonebook* and press *OK*
2. Press *Options*, select *Others* then press *OK*
3. Select the *Own number* and press *OK*

**Important Note:** Even though you have the option to edit your own number, but we strongly suggest you Do Not change it. As changing your own number in the phone may cause confusion with receiver's call display or any other unexpected network issues may occur.

# Messages

You can send and receive messages. However, it may depend on your network operator. Please contact your network operator for more information.

## Write messages

1. Select *Menu, Messages* and press *OK*
2. Press *Write message*, choose *New SMS (text message)* or *New MMS (multimedia message)*

**Note:** For MMS test message, extra service charge may apply depends on your cellular service plan, please contact your cellular carrier for details)

## Text input

The following functions are available:

- Press 0 to add a space
- Press the \* The button to add special characters, using "Up/down arrow keys" and "M1/M2 keys" to navigate to the desired symbols. Press *OK* to select.
- Press the arrow keys to move the cursor left or right.
- Press the right menu button to delete.
- Press and hold right menu button to

delete all letters.

- Press the # Button to switch between small, capitalization and word recognition. The icon display on the top right of the display.

### **Input methods are:**

- En: T9 Predictive, first letter cap then small letter
- En: T9 Predictive, all small letter
- EN: T9 Predictive, all cap letter
- Abc: Corresponding keys once per letter, first letter cap then small letter
- ABC: Corresponding keys once per letter, all small letter
- ABC: Corresponding keys once per letter, all cap letter
- 123: All number input

After you the message is complete, press *Options* and select *Send*


The phone has the possibility that *Sends to* one or multiple contacts.

### **Other options:**


You can see the limit of the number of written letters on the right top of the screen.

## **Inbox**

In this menu, you can read new or already read *messages*.

Depending on the mode, the phone vibrates or rings and the Green LED will flash if you get new *messages* in standby mode, you can also see this icon  on the screen.

Press the *Option* for following functions: *Delete, Reply, Call sender, Forward, Advanced and Save.*

*Note: If the message memory is full,  flashes in standby mode, please delete some messages to receive new ones.*

## **Drafts**

In *Draft*, you will see your saved SMS messages.

## **Outbox**

In *Outbox* store unsent messages.

## **Sent**

In this menu, you can see already sent *messages*.

The following functions are available: *View, Delete, Delete all, Forward, Mark and Sort.*



## Voice mail

The voice message is a network feature. When a voice message is received, the icon of a new message appears on the screen of your phone.

### Access the voicemail:

In standby mode, press and hold the number 1 and your phone will call the stored *Voice mail* (after setup)

**Note:** *This service must be supported by the network operator.*

### Setup the voice mail:

1. Select *Menu, messages* and press *OK*
2. Select *Voicemail* and press *OK*
3. Select *Line 1 number* and press *Edit*
4. In this field, you can enter either your ***own phone number*** (*voicemail password needed*) or your *voice mail retrieval number* (*no password needed*).
5. Press *Save*.

**Note:** *The **voice mail retrieval number** is unique. Please contact your cellular service carrier to obtain the number.*

## Calls history

In this menu option, Your phone stores list for *Missed calls*, *dialed calls* and *received calls*.

**Note:** *The latest entries are on the top of the list.*

You can also delete all call history by pressing *OK* on 4<sup>th</sup> option *Delete all*

*Call timers* provide you the time information about the *Last call*, *Received calls*, *Dialled calls*, and *Entire call history*.

## Organizer

### Alarm clock

Up to 3 alarm clocks can be made.

To set the alarm:

1. Select an alarm and press Edit. You can set the alarm with following options: Status on/off (Press Camera button to confirm), Time, Repeat as well as the Alarm tone.
2. After the alarm clock is set, press button Save.

3. When the alarm sounds, press Stop or Snooze button to stop the alarm. If the alarm was snoozed, it will sound the alarm again in 5 minutes.

## **Calculator**

With this function, you can use your mobile phone as a calculator. The Calculator controls the basic arithmetic functions.

Features:

- Type the number (1 to 0).
- Press # for a decimal point.
- Use the arrow keys for +, -
- Use the M1 M2 keys for  $\times$ ,  $\div$
- Press Camera button for: =
- Press right menu button for delete
- 

## **Calendar**

1. Select Menu, Organizer and press OK
2. Select Calendar and press OK

Press down arrow, up arrow, M1 and M2 Keys in the calendar navigate the date.

By pressing the left menu button (Options), you can Add new schedule, View schedule, check all schedules, Clear today's schedule and Clear all Schedules.

# Bluetooth

## Active Bluetooth

1. Press *Menu->Organizer->Bluetooth* then press *OK*
2. Select 1<sup>st</sup> option *Bluetooth* then press *ON*

**Important note:** When you are not using Bluetooth connectivity, select Bluetooth off. Do not pair with an unknown device.

## Bluetooth Settings

### Visibility

1. Press *Menu->Organizer->Bluetooth* then press *OK*
2. Select 2<sup>nd</sup> option *Bluetooth visibility* then press *Activate*

**Note:** To prevent other devices from finding your device, select **off**. Even if you select **off**, paired devices can still detect your device.

### Device name

1. Press *Menu->Organizer->Bluetooth* then press *OK*
2. Use *down arrow navigation key* to select to *Device name* then press *OK*.
3. *Jethro SC330* should appear with for other Bluetooth devices. You can *Clear* it and change to your desired name.

## **Add new device**

\*Search for available Bluetooth audio devices.

1. Press *Menu->Organizer->Bluetooth* then press *OK*
2. Select *Paired device* and press *OK*
3. Select *Add new device* and press *Add*
4. After the device you want to pair appeared on the screen, press *Stop* to stop searching.
5. Select the device from the list and press *Pair* to connect.
6. When connecting to another Bluetooth device you need a shared password. Enter the password and press *OK*

**Note:** For the shared password of the another device, please refer to its default password in the user manual or the password the other device has been set manually.

# Multimedia

## Camera

Camera (take photos)

**Note:** To get sharp photos, wipe the lens clean with a dry cloth.

1. Press shortcut *camera button*.  
Alternatively *press Menu->Multimedia->Camera*.
2. Press Camera button to take a photo.
3. After the photo was taken, press *Options to Delete, Set as wallpaper* or go to *Image viewer* for more options.

**Note:** To store more pictures you need a micro SD memory card up to 16 GB. (Not included in the accessories)

## Camera adjustment

1. Use Up/down navigation arrow keys to zoom in and out.
2. Use the \* button and # button to adjust EV/light sensitivity.

**Note:** Zoom may reduce picture quality.

## Camera settings

1. In camera, press *Options*, select *Settings* then press *OK*

2. In this menu, you can change the *quality* of the photo, *Banding*, *Shutter sound* on/off, *auto save* on /off and change the *preferred storage* to save the photos between Phone or microSD card (not supplied with accessories)

## **Image (Image viewer)**

Displaying the stored photos in JPG format.

The following functions are available under *Options: Delete, Mark, Rename, Slide show and Details*

## **Video camera**

Video (take video)

**Note:** *To get sharp photos, wipe the lens clean with a dry cloth.*

1. Press *Menu->Multimedia->Video camera*
2. Press *Camera button* to start recording.
3. Press *Camera button* to stop recording.
4. Press *Options* to *View video directory*, change the *setting* of the video etc.

Video camera adjustment

1. Use Up/down navigation arrow keys to zoom in and out.
2. Use the \* button and # button to adjust EV/light sensitivity.

**Note:** Zoom may reduce video quality

## Video (Video viewer)

Displaying the stored video in AVI or 3GP format.

Use *Camera button* to playback, *M1* to skip backward (press hold M1 to fast backward) and *M2* to skip forward (press and hold M2 to fast forward)

## FM Radio

With this function, you can hear FM radio. The following buttons are available in FM mode:

Keys	Functions
M1	Previous channel
M2	Next channel search
Arrow key up	Increase volume
Arrow key down	Decrease volume
Camera button	Turn on / off



The options include:

*Auto search and save:*

Automatically search all available FM stations and save.

*Channel list:*

Playback, editing, or delete the stored channels.

*Save:*

Stores the transmitter you are listening

*Manual search:*

Manual channel search.

## **My file**

1. Select Menu, Multimedia and press OK
2. Select My file and press OK

Use the *Options* to manage your files and folders in the phone memory and memory card.

*Open:*

To display the contents of the selected folder.

*New Folder:*

To create a new folder.

*Rename*

To rename a folder.

*Delete:*

To delete a folder.

## Audio

To play the music files you saved in the phone memory or the microSD card(not supplied with accessories)

With this function, you can listen to Audio files. The following buttons are available in *Audio* mode:

Keys	Functions
M1	Previous audio file (Press and hold M1 to fast backward)
M2	Next audio file (Press and hold M2 to fast forward)
Arrow key up	Increase volume
Arrow key down	Decrease volume
Camera button	Play / Stop

# Settings

## Profiles (sound)

Press *Menu->Settings->Profiles* then *OK*

**Important note:** To activate the speaking keypad feature, please select *Human voice profile*, press *Options* and *Activate*.

Display the profile mode list including:

**General, silent, meeting, Human voice and outdoor.**

Select the mode and press *Option* will enable following options.

Activate: To activate the selected Profile

Add: To add setting options to the selected profiles

Settings: Adjust ringer, keypad sounds, and other desired sounds etc.

Following sound settings are available:

Signal type, call type, ringtone, ringtone volume, messages, call volume, key tone, keypad volume, power on, power off and System alert (sound system for error messages, weak battery etc.).

## SOS

How does SOS function work? **Caution:**

When an SOS call is activated the phone is pre-set to handfree/speakerphone mode. Do not hold the device near your ear when the speakerphone mode is in use, because the volume maybe extremely loud.

How does SOS operate work?

Caution: When an SOS get in touch with is triggered the system is pre-set to handsfree/speakerphone technique. Do not keep the product near your ear when the speakerphone technique in use, because of the quantity may be extremely loud.

The SOS operate is a simple function that can preserve lives in the decisive moment. You can shop a total of 6 SOS relationships and SMS.

You must preserve these relationships first, in the case of a critical when you media the emergency get in touch with the key on the back of the product, these figures will be called in sequence.

During the emergency call a warning signal will be issued, so the person knows that it is an emergency and it sends an emergency SMS to all stored numbers!

If the first number is not reached, the next number is dialed automatically, etc. If no emergency number is stored or your phone card is empty or you are in a foreign network (E.g. roaming not enabled), you can still choose 911 or other emergency numbers with the digit keys.

## Note:

- Want to stop the alarm, must press the right menu button or the SOS button.
- When using a pre-paid SIM card:  
Make sure you always have sufficient credit on your pre-paid SIM card as private emergency numbers without sufficient balances are not elected.
  - Usually the international emergency call 911 can still be called outside of the network provider's home network.

**Important note:** If you want to store emergency numbers such as rescue, police, fire service etc. as an emergency number, you would need to check before this with the respective institution. Jethro assumes no liability for any costs incurred if you mistakenly call.

## SOS Settings:

1. Choose *Menu, settings* and press *OK*
2. Choose *SOS* and press *OK*

## SOS Status

You can turn the *SOS function* on and off

## SOS numbers (contacts)

You can save up to a maximum of 6 *SOS numbers* and its calling order.

## SOS SMS

When SOS call started, pre-crammed SOS text is sent to all *SOS numbers*. The text can be changed.

## Phone settings

1 Select *Menu, Settings*, and press *OK*

2 Select *Phone settings* and press *OK*

The following menu items are available:

### *Time & date*

Set *Time zone, date, Time and Format*.

**Note:** *The time and date should set automatically.*

### *Language*

In this menu, you can set the display language

**Note:** *The default language will be chosen automatically base on the SIM card language.*

### *Preferred input method*

In this menu, you can define your preferred input method (*See page 20 for all input method options*).

## Call settings

1. Select *Menu, Settings*, and press *OK*
2. Select *Call settings* press *OK*

Depending on the network operator, you may use the following services:

### Flip to answer:

This function provides you the choose about how to answer the incoming phone calls. Activate this feature will allow you to answer the phone by just flipping the cover.

**Note:** *Default setting is pressed the green answer key to answer an incoming call.*

### Call divert:

With this network service, you can redirect incoming calls to another specify phone number. Multiple calls can be forwarded at the same time.

### Call waiting:

You will be informed during a conversation when another call comes in. Press the left menu button to receive the call. The first call is in the other direction if you do not preclude the call - wish to press the **hook** button.

### Call barring:



With this network service, you can restrict your phone calls.

## **Display**

Wallpaper settings:

Choose wallpaper

Idle display settings:

To change the display information on your home screen

Contrast:

Use *M1/M2* to adjust screen contrast

*Backlight:*

Adjust the brightness and illumination time of the display

*Keypad backlight:*

Adjust the illumination time of the keypad

*LED mode:*

Adjust front LED light On, Off or Night mode(disable between 8:00 pm to 6 am)

## **Security settings**

1. Select *Menu, Settings,* and press *OK*

2. Select *Phone settings* and press *OK*

The following functions are available:

### *SIM security*

*PIN lock:* You can turn the SIM lock on/off with knowing the current *PIN-Code* of the *SIM card*; you can change the PIN code for the *SIM card* at any time.

*Change PIN/PIN2:* To change the password, enter the current password and then the new password for *PIN* or *PIN2*

*Note:* 3x failed entering the correct current *SIM PIN-code* will lock *SIM card*, and will be asked for *PUK* number to unlock it. Please contact network operator for your *PUK* number. The *SIM card PIN-code* is *NOT* the phone factory default code.

### *Phone security:*

*Phone lock:* You can turn the phone lock on/off with knowing the current *PIN-Code* of the *Phone*

*Change password:* To change the password, enter the current password and new password then confirm again.

**Note:** The factory default code is: **1234**.

## Connections

1 Select *Menu, Settings*, and press *OK*

2 Select *Connections* and press *OK*

Depending on the network operator, you can use the following services:

### *Network selection:*

You can choose between automatic or manual *Network selection chooses*.

## M1/M2 Direct numbers

4. Select *Menu – Settings* and press *OK*

5. Select *M1/M2 Direct numbers* and press *OK*

Here you can see and edit the *M1* and *M2* Numbers

Press the *M1* or *M2* button in the standby mode to dial the stored phone number

## Restore factory settings

With this function, you can reset the phone settings to the factory-set configuration.

You must enter the password to restore factory settings. The default password is:

**1234.**

# Troubleshooting

If problems or irregularities occur during the use of the phone, read the information in the following table. If a particular problem cannot be solved by the following information, please contact the customer service via email: [Jethro@jethroshop.com](mailto:Jethro@jethroshop.com)

The phone will not turn on:

- Check whether the battery is correctly on the phone.
- Check the battery status, charge 24 h long the battery or swap it if necessary from (6 months warranty).
- Check that the PIN code has been entered correctly.
- If the PIN-code 3 x false the SIM card is blocked and you need the PUK code (please contact your network operator for your PUK code).

SIM card error:

- Dirt on the contact areas of the SIM card? Clean the contact areas of the SIM card. \*Do not use water.
- SIM card is not properly inserted.

Insert the SIM card properly.

- SIM card does not work or is damaged? Let your network operator replace the SIM card.

The network connection cannot be established:

- Poor reception? Embark on an open place or, if you are in an enclosed space, near the window.
- You are out of range of the cellular network. For information about the network coverage, Please contact your network operator.
- SIM card is not valid. Contact your network provider.

Bad voice quality:

- Bad network connection quality on the part of the operator? Press the stop button and select again. You will possibly need to switch to a network connection or phone line with better quality.
- Poor quality of local telephone line? Press the stop button and select again. You will possibly a network connection or phone line with better quality.
- Try to turn volume louder.

Outgoing calls cannot be done:

- Check the phone number and try again.
- Have you activated the function call barring? If yes please disable all.
- Check whether the SIM card in the network is registered.
- Check that is enough credit on your SIM card.

You cannot receive incoming calls:

- Check whether the SIM card in the network is registered.
- Check if the phone is turned on.
- Check the signal strength
- Have you activated the function call barring? If yes please disable all.

Send SMS not working

- Please check the SMSC number (communication Central) under the following menu item:  
"Messages - settings - SMS settings - SIM - SMSC - address": here the communication Central number of your carrier should be.

The display is black or white:

- Check the battery status, charge the battery or replace it.
- Check the background image.

- Did the phone get wet?

Locked:

- Check that if the PIN code has been entered correctly. If the PIN code has been entered incorrectly 3 times, the SIM card will be blocked and you will need the PUK code to unlock it: (please contact your network operator for your PUK code).

Tip: If particular problems could not be solved by the information, please visit our Web site [www.jethroshop.comn](http://www.jethroshop.comn) and choose the product page of your phone and read the FAQ (frequently asked questions) or contact customer service.

Note: Please do not try to repair the phone yourself.

## Battery

- Your mobile phone is powered by a rechargeable battery.
- Note that a new battery only reaches its complete capacity, after two or three periods complete price cycles! Battery energy can end up paying several hundred periods until eventually discharged. When the working time (talk

and standby time) compared to the normal working time is much shorter, you should buy a new battery. Unplug the charger from the mains and from the product if it is not required. If the battery is completely discharged, it may take a few minutes until the price indicator in the show seems to be, or you can call people.

- Use only battery power and Chargers authorized by the product producer. If you do not use the charger, pull the mains plug out of the outlet. Leave the battery no longer than a week in the charger, since an excessive price may shorten its lifetime.

- A completely billed battery with plenty of your time discharges itself when not in use.

- Extreme temperature ranges have a negative influence on the efficiency of your battery.

- Use the battery only for its intended purpose. Never use broken Chargers or battery power.

- Do not short-circuit the battery. An accidental short-circuit can take place by a metallic object of the plus and minus pole of the battery is linked directly together. Short-circuiting the terminals



may harm the battery or the connecting object.

- Throwing battery power in a flame will cause danger of explosion! Batteries may also explode if they are broken. Dead battery power must be disposed of effectively.

- Do not attempt to start the battery power or to destroy. Liquid leaking from an assortment, you are making sure the battery fluid does not get in touch with your skin or in the eyes. If there was a get in touch with, fresh the skin or eyes immediately with water, or seek advice from a doctor

- Dispose of battery power according to the regulatory requirements (E.g. with regard to recycling). Never dispose of battery power in the household waste.

- Keep temperature ranges between  $15^{\circ}\text{C}$  and  $25^{\circ}\text{C}$ . The mobile phone with a cold or warm battery not may work temporarily, even when the battery has been completely billed. The efficiency is varying especially at temperature ranges below the freezing point.

# Phone

If you go through suggestions below, you can avoid any warranty obligations, and you can enjoy your product for many years.

- Please use only original components or components that are authorized by the cell mobile phone producer. The use of components without permission can lead to inadequate efficiency, harm the product or harm even your human body and interfere with appropriate local telecommunications devices.
- Please modify off your cell mobile phone before you fresh it. Use for this purpose damp or antistatic fabric, no substances or cleaning lotions, which may harm the product.
- Because the cell mobile phone capable of generating electromagnetic fields, you should put never found near attractive objects, such as a computer or a hard disk.
- Interference is generated using the cell mobile phone nearby of certain books such as TV, telephone, stereo, and computer.

- Never leave your cell mobile phone in the Sun or in an atmosphere with strong radiation because high temperature ranges considerably shorten the life of digital components.
- Keep the product dry, because liquids may harm the routine.
- Never somewhere about the product with strong force and do not drop it. Violent actions of this sort may harm the routine.
- Please close any incompatible gadgets on the product.
- Do not attempt to disassemble the product or its battery.
- Keep the cell mobile phone with a flammable or explosive material.
- Never try to price the product, without previously having placed the battery.
- Do not paint your mobile phone. By the color, moving areas may stick and avoid the proper function.
- To detach the device from the mains, pull the cord from the mains outlet. Therefore, you must position the product so that an unhindered having accessibility to the mains outlet is always ensured; so that you can immediately remove the mains plug in a critical situation. To avoid the flame threat,

detach always unplug after each use of the product from the AC store.

In the same way, all recommendations apply to mobile phone, battery, charger, and all components. If any of these items not functioning effectively, take it to your supplier. The staff will assist you and repair or substitute the device if necessary.

## Safety instructions

Read these simple guidelines. Failure to follow these rules can have dangerous consequences or violate regulations.



**Do Not switch on the phone when the user of the mobile phones is forbidden.**

It may come to errors or could cause a hazard.



### **Traffic safety**

Never use the phone in your hand while driving



### **Switch off in aircraft**

Mobile phones can cause interference in aircraft.



### **Switch off in hospitals**

Follow all rules and regulations. Switch off the phone near medical equipment.



### **Turn off at gas stations**

In the vicinity of petrol stations and other places with explosive goods, the mobile phone is switched off.



### **Interference**

A wireless phone can cause errors, which could affect performance.

Read these simple recommendations. Failure to adhere to of these guidelines can have dangerous consequences or violate rules.

Do Not stimulate the product when the user of the mobile phones is forbidden. It may come to mistakes or could cause threat.

Traffic safety

Never use the product in your hand while driving

Switch off in aircraft

Mobile phones can cause a disturbance in aircraft.

Switch off in hospitals

Follow all policies. Switch off the product near healthcare devices.

Turn off at gas stations

In the area of petrol channels and other places with explosive goods, the cell mobile phone is modified off.

## Interference

The wireless mobile phone can cause mistakes, which may impact efficiency.

## Road safety:

Never use a mobile phone in your hand while driving. Always protect the product in its holder; position the product on the passenger seat or in a place where it can break loose in a collision or sudden stop. Remember: street protection always has priority!

## Operating environment:

Don't forget to observe the special rules in a place, and always turn off the product when the use of mobile phones is prohibited

Or if the product causes disturbance or dangerous situations can arise.

Always keep the device in its normal working roles.

Parts of the product are attractive. Steel areas may be attracted to the product, and individuals with listening to aid should not keep the product in the ear with the listening to aid.

Always protect the product in its holder as metal areas may be attracted to the listener. Bring no bank credit score cards or other attractive information carriers

nearby of the product because it contained information this can be deleted.

**Electronic devices:**

The most modern electronics is guarded against RF (radio frequency) alerts. However, it can happen that certain books against the RF alerts from your cell mobile phone are guarded.

**Hearing aids:**

Some digital mobile phones can cause mistakes with some assistive listening to devices. If such problems you can get in touch with the support agency.

**Other healthcare devices:**

The operation of stereo transmitting devices, such as mobile phones, can interfere with the operate of inadequately guarded healthcare gadgets under certain conditions. If you need information about the adequate guarded against external RF energy or have any queries, seek advice from a physician or the producer of the healthcare system. Switch off your mobile phone in healthcare care facilities when you are prompted by signs, posters or other written arrangements. Hospitals or healthcare care facilities, gadgets be used under conditions that could be sensitive to external RF energy.

*Labeled sites:*



### *Labeled sites:*

Turn off wherever your telephone, where appropriate requests are suspended.

#### Hazardous locations:

Switch off your mobile phone in dangerous places, and act according to the directions and recommendations. In such places, a spark can trigger an blast or cause a flame, where you can get hurt or come even to death. We recommend the users convert off the product at support channels. Users have reminded the need to observe restrictions on the use of stereo devices in fuel depots (storage and distribution areas), chemical plants or where blasting. Places, where blast threat exists, are often but not always clearly marked. This includes, for example, the below deck on ships; Environments of pipes and tanks in which substances are; Automobiles that are powered by liquefied petroleum gas (such as propane or butane); Places where substances or particles, such as grain, dust or metal powders, are located in the air; as well as any other position, where usually are advised to convert off your automobile engine.

### **Vehicles:**

RF alerts may impact improperly installed or inadequately guarded digital techniques in automobiles (E.g. digital fuel injection techniques, digital ABS techniques (anti-lock-systems), digital speed control techniques, air bag systems) impact.

For your automobile information, please get in touch with your automobile producer or its representative. You should also ask for the manufacturers of gadgets that were subsequently fitted in your automobile.

### *Information:*

Information about the documentation (FCC):

This system complies with part 15 of the FCC Rules. The operation is subject to the condition that this revolutionary product does not cause a dangerous disturbance.

Any Changes or modifications not expressly authorized by the party responsible for compliance could void the customer's authority to operate the device.

*Note:* This device has been examined and found to adhere to the boundaries for a Class B digital system, pursuant to part 15 of the FCC Rules. These boundaries are made to provide reasonable protection against dangerous disturbance in a residential installation. This device generates uses and can radiate rf energy and, if not installed and used in accordance with the guidelines, may cause dangerous disturbance to stereo communications. However, there is no guarantee that disturbance will not take place in a particular installation. If this device does cause dangerous disturbance to stereo or television wedding celebration, which can be determined by turning the device off and on, the consumer is encouraged to try to correct the disturbance by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the device and recipient.

- Connect the device to retail store on a routine different from that to which the recipient is linked.

- Consult the supplier or an experienced radio/TV technician for help.

RF visibility information (SAR):

THIS DEVICE MEETS FCC LIMITS FOR EXPOSURE TO RADIO WAVES

Your mobile phone is a stereo transmitter and recipient. It is made not to exceed the boundaries for visibility to stereo waves (radio regularity electromagnetic fields) adopted by the Federal Communications Commission (FCC). These boundaries include a substantial protection margin meant to assure the protection of all individuals, regardless of age and wellness.

The stereo wave visibility recommendations use a device of measurement known as the Specific Absorption Rate or SAR. The SAR limit for mobile phones is 1.6 W/kg.

Tests for SAR are conducted using standard working roles with the product transmitting at its highest certified energy in all examined regularity bands. The highest SAR principles under the FCC recommendations for this revolutionary product design are:

Head SAR: 0.74 W/kg

Body SAR: 0.87 W/kg

During use, the actual SAR principles for this revolutionary product are usually well below the stated above. This is because, for purposes of system efficiency and to

minimize disturbance on the system, the working energy your mobile phone is instantly decreased when complete energy is not needed for the get in touch with. The lower the ability output of the product, the lower it's SAR value. Body-worn SAR testing has been carried out at a separation distance of 1.0 cm. To meet RF visibility recommendations during the body-worn function, the product should be positioned at least this distance away from one's human body.

Organizations such as the World Health Organization and the US Food and Drug Administration have suggested that if people are concerned and want to lessen their visibility, they could use a hands-free accessory to keep the wireless system away from the head and human body during use, or decrease how long spent using the product. While there may be differences between the SAR levels of various mobile phones and at various roles, they all meet the government requirement. The FCC has granted an Equipment Authorization for this design mobile phone with all reported SAR levels evaluated as in compliance with the FCC RF visibility recommendations. SAR information about this design mobile phone is on information file with the FCC

and can be found under the Display Grant section of <http://www.fcc.gov/oet/ea/fccid> after searching on FCC ID: 2AAWJSC330

Limitation of liability:

- JETHRO declines all responsibility for injury-related, indirect, special, resulting from an accident or unavoidable, as the predictable viewed or not viewed can be.
- We decline all responsibility and responsibility for losses caused by natural disasters (such as an earthquake, flood, etc.) or other incident or accident (including deliberate or accidental misuse by the producer in the framework of these accidents or other unusual circumstances) that lie outside of our responsibility.

## More information

If you have any questions or want to get more information about one of our devices in experience, please check our Web site [www.jethroshop.com](http://www.jethroshop.com) or contact us at Email: [Jethro@jethroshop.com](mailto:Jethro@jethroshop.com)

## Contact us:

### Jethro Trading Ltd.

Toll-Free : 1-888-509-6199

Email: [jethro@jethroshop.com](mailto:jethro@jethroshop.com)

Company website:

[www.jethroshop.com](http://www.jethroshop.com)

**IC: 11350A-SC330**

**FCC ID: 2AAWJSC330**

Tested to comply with  
FCC certification



