

User Manual

JETHRO SC628 Mobile Phone



JETHRO

Information

Information about the IC Caution.

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) This device may not cause interference, and (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Certification (FCC):

This device complies with part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions,

may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: -Reorient or relocate the receiving antenna. -Increase the separation between the equipment and receiver. -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. -Consult the dealer or an experienced radio/TV technician for help. Body-worn Operation This device was tested for typical body-worn operations. **To comply with RF**

exposure requirements, a minimum separation distance of 1.5cm must be maintained between the user's body and the handset, including the antenna.

Third-party belt-clips, holsters, and similar accessories used by this device should not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with RF exposure requirements and should be avoided. Use only the supplied or an approved antenna.



FCC ID: 2AAWJ-SC628

IC: 11305A-SC628

JETHRO SC628
User Manual

Table of contents	
Security Precautions	6
Specifications	8
Keys Description.....	9
Basic Icons	10
Setting up the phone	11
Insert SIM card.....	11
Insert MicroSD card (optional)...	13
Insert battery	13
Charge the Battery.....	15
Activate the Cell Phone	16
Important Features.....	18
Calls.....	18
How to make a Call.....	18
How to end Call	19
How to accept or reject a call	19

Hands Free	19
Call Info.....	20
Missed Call.....	20
Message	21
Write messages.....	21
Receive and view messages.....	22
Draft (Unsent message)	23
Sent message.....	23
Clear message	23
Contacts	23
Name Search.....	23
New contacts: Save the name and number.....	24
Edit Contact.....	24
Remove Contact.....	24
Send contact by SMS	24
Speed dial buttons	24
Extra Features	25

Camera / Video Recorder / Voice Recorder	25
Calendar	25
FM radio	25
Bluetooth	25
Alarm.....	26
Emergency Features.....	26
Who to call in an emergency?	27
What will happen when the emergency call is triggered?	28
Enter/Edit emergency contacts ..	30
Edit emergency message	30
USB Data Cable	30
Warranty	31
Troubleshooting	31
Security Information	39

Security Precautions

To ensure that you use the mobile phone safely and effectively, please read the following information carefully.



Safe Power-on

Do not use phone in places where mobile phones are forbidden, or may cause interferences or dangers.



Traffic Safety First

Do not use phone while you drive.



Shutdown in Restricted Areas

Comply with related restriction rules or regulations. Shut down the mobile phone on the airplane, or around inflammable articles, chemicals, or medical appliances.



Interference

Mobile communication may be affected by

radio interferences, so the performance of phone is affected accordingly.

Waterproof

This mobile phone is not waterproof. Keep it dry under any situation.

Keep the Mobile Phone Out of Reach of Children


Phone and all its assemblies should be kept out of reach of children.

Assemblies and Batteries

Please use the company designated the battery and charger, Failure to comply with this rule may result in explosion of the mobile phone.


Professional Service

Do not disassemble the mobile phone and its assemblies by yourself. The mobile phone is serviced only by authorized organizations.

-  If a part is missing or defective, please contact Jethro hotline at the number 1-888-509-6199 or email Jethro@jethroshop.com for any assistance

 





 


Specifications



- **Dimensions:** 120 mm (height) * 59 mm (width) * 13.3 mm (depth)
- **Battery capacity:** 1000mAh
- **Standby duration:** 225h
- **Call duration:** 3.8h

 **Note:** The call duration is related to the specific network situations.











Keys Description







Keys	Explanation
------	-------------

	<p>Green Button: <i>To answer or confirm</i></p>
	<p>Red Button: <i>To hang up or return</i></p>
	<p>Arrows: <i>To navigate Menu or shortcut to Contacts (down arrow) or Alarms (up arrow)</i></p>
	<p>Emergency Button: <i>In an emergency, press for 3 seconds</i></p>
	<p>Volume Buttons: <i>To change the phone volume</i></p>
	<p>Power Key: <i>Press and hold 3 seconds to power On / Off</i></p>
	<p>Pound Key: <i>To change the input methods. *Press for 3 seconds to activate the silent mode when at home screen</i></p>
	<p>Star Key: <i>Battery charging indicator</i></p>
	<p>Keypad Lock: <i>To lock and unlock the keypad. *Press and hold for 2 sec</i></p>

	<p>Flashlight Key: <i>When the phone is activated, you can choose to have continuous light or just brief light.</i> <i>*Press for 2 seconds to turn continuous light On / Off</i></p>
	<p>Family Number: <i>You can assign these two keys as your family speed dials from your saved phone contacts.</i></p>

Basic Icons

Symbols	Explanation
	Indicates the cellular reception.
	Ring only
	Vibrates only
	Indicates the Silent / Sleep mode is activated
	Vibrate then ring
	Vibrate and ring
	Headphone plugged
	Playing Music
	Unread multimedia message (MMS)
	Unread text message (SMS)

	Alarm on
	Indicate charging status and battery level
	Unread Missed call
	Bluetooth on
2G	2G network
3G	3G network
	Keypad lock is on
	On foreign network, additional costs may apply. *The R symbol maybe on if you are on sub network such as Cricket wireless (main network is T-Mobile) or FIDO (main network is Rogers) etc.

Setting up the phone

Insert SIM card

Figure 1: Lift the battery cover, start for it at the recess the top left corner of the phone.

Figure 2: The location for the SIM card is in the top left corner, inserts the card with the gold chip face down.

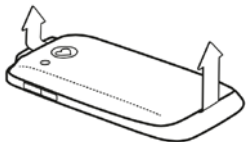 


Figure 1



Figure 2

Caution:

1. Keep the SIM card out of reach of children.
2. Do not touch the portion that has the chips.
3. Keep the SIM card away from magnets.
4. Avoid putting the SIM card under direct heat such as sunshine.

Insert MicroSD card (Optional)

Figure 3: Push the cardholder switch to the top, place the card into the cardholder, close the cardholder and pull the switch down

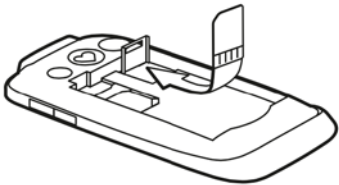 


Figure 3

Insert battery

Warning: Do not remove battery when the power is on or when the phone is connected to the charger. Fail to comply this rule may result in damaging the cell phone and the SIM card.

Figure 4: Place the battery so the golden contact matches with phone.

Figure 5: Press the battery cover until it clicks. Start at the top of the phone, to the center.



Figure 4

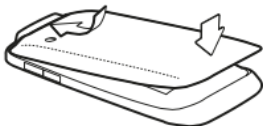 



Figure 5

Caution:

1. Before using the phone for the first time, please charge the battery for at least four hours. If you violate this charging time, the battery life may decrease.
2. During the charging process, do not remove the battery. Failure to comply may damage the mobile.
3. It is normal if the phone or the charger is warm during charging.
4. If the battery capacity is exhausted, it takes a few minutes in the charging process before the charging icon displays on the LCD.

-  **If a part is missing or defective, please contact Jethro hotline at the number 1-888-509-6199 or email Jethro@jethroshop.com for any assistance**

Charge the Battery

Warning: Use only the Jethro designed battery and charger, fail to comply with this rule may result in explosion of the mobile phone.

Do not attempt to insert the charging cable into the socket for the headphone. This could damage the phone.

- 1. Charge with the Charging Cable**
 - Insert the charging cable into the USB connector on the top of the phone
 - Then put the charging cable's main plug into the socket
- 2. Charge with the Desktop Charging Cradle (optional)**

****The Desktop Charging Cradle CDS-628 needs be purchased separately***



 
 
- Insert the charging cable into the USB

- plug from back of the charging cradle.
 - Then place the charging cable into the power socket
 - Place the phone into the charging cradle.
3. **Charge with the Computer**
- You can connect your phone to your computer using the USB cable
4. **During the charging process**
- If the phone is off, battery symbol will display on the screen and button [+] flashes
 - If the phone is on, the charging status display bars fill and the button [+] flashes
5. **End of Charging Procedure**
- After charging the batter, the battery symbol or the charge status display is completely filled, and the button [+] is lit continuously.
 - You can now remove the charging cable.

Activate the Cell Phone






Attention: At the first activation of the cell phone, some adjustments must be made. You can make the settings later in the Setting

menu, but we recommend you do so now.

1. Press two seconds on  key to turn on the phone. You will feel a vibration, then Jethro logo appears on the screen.
2. Enter the 4-digit PIN code (optional). You can write your PIN here for the record: 
3. Press  to confirm when "OK" shows on screen
4. Enter the Date and Time using the keypad and select with the arrow keys to choose Language. Confirm each entry with  key. The home screen is displayed.

Note: In order to display AM/PM properly, When set up time, please always enter 24 hour format. For example, for time 10:32 pm please enter as 20:32. You can change the time format in "Menu" -> "Settings" -> "Phone Settings" -> "Time and date" -> "Set format"

and use [*] or [#] key to change between 12 hours and 24 hour format.

-  Please contact your local cellular carrier to obtain valid regular size SIM card.
-  The phone is Hearing Aid Compatible with HAC rating M4/T4
-  Default Restore Factory Password is 0000.
-  Factory restoration will reset all phone setting to factory condition and erase all contacts and call history.
-  Default keypad lock code is 0000

Important Features

Calls

How to make a Call

1. Enter area code and telephone number with the numeric keys.
2. Press Green button to connect the call,

caller name or the number of the caller appears on the screen.

3. Once connected, the name or number of the caller and the call duration are displayed on the screen.

How to end Call

1. To end the call, press the Red Button.
2. Once Call ended, the duration of the call is displayed on screen.

Note: if the caller hangs up before you, it is not necessary to press the Red Button.

How to accept or reject a call

1. When you receive a incoming call, name of the caller or number appears on the screen.
2. To accept the call, press the Green Button.
3. To reject the call, press the Red Button.
4. You can also put the call on temporary silent by pressing the Volume Button on the left side of the phone.

Hands Free

1. To switch to hands-free mode, during the telephone call, press the Green Button to start the "options", select option one: "Handsfree", then use the arrows to select "H-Free" and press Green button

to active the Hands Free.

2. To switch off hands-free mode, simply repeat the steps above and select “H-held” and press Green Button.

Call Info

1. Call Info gives you a call overview of the last 20 calls. You can also call a contact from the list.
2. You can access Call Info by pressing the Green Button on the home screen.
3. You can use arrows to browse the call list. Select the contact and press the Green Button to call the contact.

Note: Only Saved contact appears on the screen with the name. All the others appear only with the phone number.

Missed Call

- When you have missed a call, the message “ 1 missed call” appears on the home screen and the Pound Key flashes. As soon as you view the missed call, the message disappears and the Pound Key flash stops.

Note: When you review missed call list, you can press the Green Button to go to “options”. You can select in “call”, “view”,

“text”, “save to phonebook”, “edit” or “delete” the call.

Messages

With your phone, you can write and send messages (Short Message Service, aka SMS). SMS are small text message with up to 160 characters. You can also write and send multimedia messages (MMS)

- Features available here: Write message, Inbox, Draft, Outbox, Sent messages, Templates and Message Settings
- You access this menu by pressing the Menu Key

Write messages

1. Select Text message (SMS) or Multimedia message (MMS) and select ‘Ok’ by pressing the Green Button.
2. Enter the text using the keyboard and press option to choose the recipient by “Entering number” or “add from Phonebook”
3. If you chose to write Multimedia message (MMS), in the options, you can add pictures, sound or video to the text to send to the recipient.

Attention: The attachable file size for the MMS is very limited, any high definition picture, sound or video may not be successfully sent to the recipient. If error occurred when send multimedia message, it may be caused by incorrect carrier APN setting. The APN setting can be changed in “Settings” -> “Connectivity” -> “Data account”. You can select the proper carrier account, or add new PS account if your carrier name did not appear on the list. For more detail, please call you carrier customer service for obtain MMS APN settings or contact **Jethro customer service 1-888-509-6199** or email **Jethro@jethroshop.com** for further assistance.

Receive and view messages

A ring informs you that you have received a new message. “1 new message” is displayed. Press Green Button to view the message.

- Older message can be viewed in Inbox in the Message menu.

Draft (Unsent message)

It contains the messages that you do not want to send immediately, and unsuccessfully sent messages are saved under Outbox

Sent message

All messages you have sent are save in Sent message.

Clear message

A full memory blocks to receive new messages. Therefore they must be regularly removed. The memory can hold about 250 messages.

Contacts

- You can save up to 300 contacts in your phone. Once you registered the names and number of your contacts (family, friend, doctor etc.) The contacts will be saved on your Phonebook.
- You can access the menu by pressing Menu Key then press #2 key, or press Down Arrow Key at home screen.

Name Search

- You contacts are sorted alphabetically.
 1. Open Contact or Phonebook menu.
 2. Write the letter with the keyboard. Only

the contacts starting with the letters appear on the screen.

3. Use Arrow Keys to select desired contact.

New contacts: Save the name and number

1. Open Contact or Phonebook menu.
2. Select "Add new contact", Choose save the contact to SIM or Phone memory in "Select".
3. Use the keyboard to enter the contact's name, phone number and email address (optional). Select "Option" by pressing the Green Button then select "Save"
4. You can add more details in "Options". e.g.: Home, mobile etc.

Edit Contact

- This function is to later edit an existing contact.

Remove Contact

- You can delete contacts one by one or all contacts from the SIM card or the phone.

Send contact by SMS (Text message)

- Select a contact and send it as an SMS to a recipient of your choice

Speed dial buttons

- You can associate key #2 - #9 each

with a phone number that you use often.

- You can also assign M1/M2 Keys as speed dials for your family contacts.
- Note: To set up M1/M2 Keys: Open “Settings”->”Family Settings”

Extra Features

Camera / Video Recorder / Voice Recorder

- To active Camera or video recorder, press Menu Key and select “Extra” -> “Camera”. You can take picture and video, or record voice.

Calendar

- Press Menu Key and select “Extra” -> “Calendar”

FM radio

- You can listen to local FM radio with this feature. For better radio reception, please plug in a headphone. Use Arrow Keys to search channels, and use Pound Key to turn the radio On/Off.

Bluetooth

- Bluetooth is a wireless connection between electronic devices. You can pair the phone with your hands-free car-kit or

a Bluetooth headset.

1. Enable Bluetooth: Open the Settings Menu and choose “Connectivity” and choose “Bluetooth” power on.
2. Pair a new Bluetooth device: Select “My device” and search for new device. Ensure your Bluetooth device is turned on and can be searched within range.
3. Devices found are displayed on the screen and a list of devices appears. If the desired device is displayed, you can cancel the search with the Red Button.
4. Select the desired device and press Green Button to pair.
5. Follow the instructions on the screen.

Alarm

1. Set up the alarm: Press Up Arrow or open in “Menu” -> “Extra” -> “Alarm”
2. Set time: Enter the time you want and save. The Alarm is set and will sound at present every day at the specified time.

Emergency Features

- Your phone has an emergency call function. You can quickly call for help in critical situations.

- The emergency call button is disabled in the factory because this function is only effective if it is adapted to your needs. To turn the emergency call button on, press the Menu Key at home screen, select “Settings” -> “SOS settings” -> “SOS key” -> “on” and press Green Button to confirm.
- This section presents to you how emergency features work and what you should know about this feature. Please read the entire chapter for your own safety.

Who to call in an emergency?

- Each contact can be defined as in emergency call list. The emergency call function is only the difference between private individuals and aid organizations. (A private person shall confirm the emergency call. This ensures that the emergency call can not be on an answering machine)
- Inquire with the persons you want to save as emergency contact list. (If you want to save assistance organizations and official institutions (police, fire, etc.) as an emergency contact list, you must

first consult with the institutions concerned.

- **Attention:** We accept no liability for possible costs related to involuntary calls.
- **Note:** If no emergency contact is recorded, your credit is exhausted, the reception of your phone is lost or when you are on a foreign network (e.g. When roaming is not activated) the United States and Canada emergency 911 is composed if pressing the emergency call button. Your call is sent directly to the nearest police station.

What will happen when the emergency call is triggered?

- When you press three seconds on the emergency button on the back of your phone, the emergency call sequence starts.
1. **Alarm Signal:** An alarm sounds immediately, which alerts people nearby. The alarm stops only when the emergency call is canceled or confirmed.
 2. **Call Emergency contacts:** The emergency call sequence starts

immediately when the emergency button is pressed for 3 second. With the emergency call text message (SMS) sent to the contacts on SOS list.

3. **Emergency Call SMS:** The phone sends an SMS to private emergency call contacts, which informs incoming emergency call.
4. **Emergency Round:** The four emergency numbers are called in the order defined by the SOS list until someone answers the call.
 - If the first contact does not answer the emergency call, the second number is automatic called, if the second emergency call contact does not respond, the third contact is called etc.
 - If you want to be sure that your emergency call was successful in all cases, record the emergency number 911 as a contact list.
 - The phone will be on Emergency status for an hour unless you restart the phone by power it off and on again.

Note: The cell phone active hands-free function at full volume for one hour during the Emergency call status, and all

incoming calls will automatically pick-up.

Enter/Edit emergency contacts

- Press Menu key at home screen and select “settings” -> “SOS setting” -> “SOS list” and add or edit.


Edit emergency message

- Press Menu key at home screen and select “settings” -> “SOS setting” -> “SMS content” and edit the SMS.

USB Data Cable

Phone provides a USB interface. You can connect the mobile phone to the computer through the USB data cable. You can copy or move files between phone and the computer, or browse photos, videos and sound files saved on phone through the computer.

1. Insert the connector of the USB data cable to the USB interface of phone.
2. Connect the other end of the USB data cable to the USB interface on the computer.
3. Select the desired mode.

 Note: the cellular phone off state to identify USB function.

Warranty

1. The 12-month warranty period (6-month for the battery) begins on the date of receipt of the unit. The exact date is on the original sales receipt (receipt, invoice) with IMEI number. Please keep these documents carefully.
2. Our guarantee is base on our terms in effect at the time of purchase. This guarantee is only valid if the original Jethro battery is used. Jethro disclaims all warranties, according to law, in the following situations:
 - Loss of data or information
 - Individuals or incidental, and consequential Damages or indirect, independently of how these have occurred.

Troubleshooting

To save your time and unnecessary costs, it is recommended that you make the following checks before contacting professional after-sales services.

The mobile phone cannot be switched on

- Check whether you have press and hold the hang-up key for more than one second.
- Check whether the battery is in good contact. Remove the battery and re-install it, and then power on the phone again.
- Check whether the battery capacity is consumed. If yes, charge the battery.

An error message is displayed when you switch on the mobile phone

- Enter the phone lock password. If the automatic lock function is enabled, you must enter the phone password before you use the mobile phone.
- Enter the PIN code. If the PIN function is enabled, you must enter the PIN code when you power on the mobile phone each time.
- Enter the PUK code. If you enter wrong PIN codes for three times consecutively, the mobile phone is locked. You must enter the PUK code provided by the network carrier.

SIM card error

- There is dirt on the metal face of the SIM card, Use clean cloth to clear the metal contact point on the SIM card.
- If the SIM card is not installed correctly, install it according to the manual.
- If the SIM card is damaged, contact your network service provider.

Failure to connect to the network

- The network signal is weak. Move to a place with strong signals and try again.
- You have out of network coverage of the network service provider.
- The SIM card is invalid. Contact your network service provider.

Failure to make an outgoing call

- Check whether you have pressed the dialup key.
- Check whether the call is forbidden due to overdue charges.
- Check whether the SIM card is valid.
- Check whether the call restriction function is enabled.
- Check whether the fixed dialup function is enabled.

Poor call quality

- Check whether the call volume is adjusted appropriately.
- If you use the mobile phone in places with poor signals, such as around high buildings or in the basement, radio electric waves cannot reach you effectively.
- If you use the mobile phone during the peak hours, such as the traffic peak period, the call may fail due to congested lines.

The other party cannot call you

- Check whether the mobile phone is switched on and connected to the network.
- Please confirm whether it is due to debt and be barred.
- Check whether the SIM card is valid.
- Check whether the call restriction function is enabled.

The other party cannot hear you

- Check whether the microphone is enabled.
- Keep the microphone at the bottom of the mobile phone close to your mouth.

Short standby duration

- The standby duration is related to the network situation. In an area with weak signals, if the mobile phone fails to receive signals, it sends signals continuously to search for BTSs, which consumes a large amount of battery capacity and makes the standby duration short. In this case, move to a location with strong signals or power off the mobile phone temporarily.
- The battery should be replaced. In this case, replace a new battery.

Charging failure

- The contact is poor. Check whether the connector is properly connected.
- Dirt and dust are accumulated. Use soft and clean cloth to clear the mobile phone connector with the battery.
- If the environment temperature is below 0 degree or higher than 45 degree, change the charging environment.
- If the battery or the charger is damaged, replace it.

If the guide information to help you solve the

problems encountered, please record your mobile phone model and serial number, license or insurance policy information, and a clear description of the problem, and then contact the local customer service provider.

Security Information

Battery

Do not use a damaged charger or battery. Use the battery correctly. Do not short circuit the battery. Failure to comply may damage the battery or result in fire due to overheat.

Do not place the battery under high temperature or in the fire. Failure to comply may result in explosion.

Return old and useless batteries to the supplier or to the specified recycling point. Do not dispose batteries together with domestic garbage.

Its remaining capacity, battery type, and the charger decide the battery charging duration. A battery can be charged for thousands of times, but it will be worn and torn gradually. When the standby period of a battery is clearly shorter than the normal standby period, replace a new battery. Use the dedicated and

authorized charger and battery for phone. If the charger is not in use, disconnect the charger from the battery.

Do not charge the battery for too long. Failure to comply may damage the battery and shorten the battery life.

The charging capacity is affected under extremely hot or cold environment. Increase or decrease the temperature to a normal temperature in advance (when the temperature is lower than zero, the Li battery will be affected).

Traffic Safety

The mobile phone provides powerful radio voice communication functions, and the user can make voice communications at any time in any place. Thus, the user should bear certain major responsibilities.

When you drive a car, safety is the prime responsibility. Take caution when you receive calls while driving, and obey local rules and regulations.

Be familiar with the phone and its functions, such as fast dialup and redial. These functions can facilitate you to make calls conveniently while driving, instead of being distracted.

If you have hands-free kit, use it to make or

receive calls. If possible, use the hands-free kit to improve the convenience and safety of mobile phone usage.

Put the mobile phone in a place where you can find it easily without diverting your attention. If you receive an incoming call at an inconvenient time, it is recommended to use the voice mailbox to answer the call.

Inform the other party that you are driving. If necessary, hang up the call under congested traffic situation or severe weather. It is dangerous to make or receive calls in rainy, sleety, snowy, or icy weather, or under congested traffic situation.

The air bag, brake, speed control system and fuel ejector device are not affected by radio transmission. If you have any problem, contact the car franchiser.

Shut down your mobile phone at the gas station and in places where two-way radio devices are forbidden. Do not put the mobile phone together with inflammable and explosive articles. Internal sparks may result in fire.

Shut down your mobile phone before the airplane takes off. To avoid interference upon the communication system of the airplane, it is

forbidden to use mobile phones in flight. Before the airplane takes off, you can use the mobile phone only after acquiring approval from the flight crew.

Make sure that the mobile phone will not be powered on automatically by the alarms during the flight.

Operating Environment

Obey this special rule under any circumstances. Shut down the mobile phone if it is forbidden or may result in dangers.

When the mobile phone needs to be connected with other devices, read the user manual first to understand the detailed security descriptions. It is forbidden to connect the mobile phone with an incompatible product.

To ensure the operation success and personal security, you should use the mobile phone in a normal work position.

Use the mobile phone under the temperature of -10 to 50 degree Celsius.

Electronic Devices

Most electronic devices shield radio information. Consult the manufacturer for

related information.

- **Pacemaker:** Keep the mobile phone at a distance of at least 6 inch (15 cm) from the pacemaker. Do not put the mobile phone in the lapel pocket. Hear the mobile phone with the ear remote from the pacemaker, to reduce possible interferences. If the mobile phone causes interference, shut down the mobile phone immediately.
- **Hearing aid:** Certain digital wireless mobile phones may affect the hearing aid. If the interference exists, contact the manufacturer of the hearing aid.
- **The medical appliances:** To use the other personal medial appliances, consult the manufacturer first to check whether these appliances shield radio electric waves. You can also get the information from the doctor. If there is the sign of forbidding using mobile phones around the rehabilitation facility, shut down the mobile phone.
- **Car facilities:** Radio signals may affect electronic devices on the car. Confirm the related information with the device manufacturer.
- **Emergency Calls**

- Same as other wireless mobile phones, phone use radio signals, but cannot guarantee that radio signals are connected under all circumstances. Thus, do not solely depend on the mobile phone for important calls, such as under urgent medical situations.
- To ensure that you can make calls and receive calls, place the mobile phone in a network service area with powerful signals, and ensure that it is powered on.
- To dial emergency calls, enter the local emergency number and press the dial key to initiate the call.
- Other Important Safety Information
- Only use auxiliary parts of the manufacturer or authorized by the manufacturer. Failure to comply may affect the performance of the mobile phone, damage the phone set, result in personal injuries, or violate national specifications for mobile terminal products.
- Use the slightly wet cloth or antistatic cloth to clean the phone set. Do not use dry cloth that may generate static discharge. Do not use chemical cleaning agents to clean the mobile phone surface. Shut

- down the mobile phone while you clean it.
- The mobile phone may generate electrical magnetic field. Do not place it close to magnetic storage media such as computer disks. It may cause interferences if you use the mobile phone around electronic appliances such as televisions, phones, radios, and person computers, so the performance of the mobile phone is affected accordingly.
 - Do not expose the mobile phone under direct sunlight. Failure to comply may cause the mobile phone to be overheated.
 - Prevent various fluids from entering the mobile phone. Failure to comply may damage the mobile phone.
 - Do not throw or beat the mobile phone. Failure to comply may damage internal circuit boards on the mobile phone.
 - Do not connect the mobile phone with un-asserted devices.

FCC Statement:

This mobile device model complies with related international specifications of radio electric wave radiation.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses instructions, may

cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

IC Statement:

Warnings:

This product complies with the applicable Specific Absorption Rate (SAR) limit when used directly against the head or, when worn or carried, at a separation distance of 15 mm from the body

This device complies with Industry Canada's license-exempt RSSs
Operation is subject to the following two conditions:

(1) This device may not cause interference and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

(1) l'appareil ne doit pas produire de brouillage, et

(2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication.

Conformément à la réglementation d'Industrie Canada, le présent émetteur radio peut fonctionner avec une antenne d'un type et d'un gain maximal (ou inférieur) approuvé pour l'émetteur par Industrie Canada. Dans le but de réduire les risques de brouillage radioélectrique à l'intention des autres utilisateurs, il faut choisir le type d'antenne et son gain de sorte

que la puissance isotrope rayonnée équivalente (p.i.r.e.) ne dépasse pas l'intensité nécessaire à l'établissement d'une communication satisfaisante.

This radio transmitter (identify the device by certification number, or model number if Category II) has been approved by Industry Canada to operate with the antenna types listed below with the maximum permissible gain and required antenna impedance for each antenna type indicated. Antenna types not included in this list, having a gain greater than the maximum gain indicated for that type, are strictly prohibited for use with this device.

Le présent émetteur radio (identifier le dispositif par son numéro de certification ou son numéro de modèle s'il fait partie du matériel de catégorie I) a été approuvé par Industrie Canada pour fonctionner avec les types d'antenne énumérés ci-dessous et ayant un gain admissible maximal et l'impédance requise pour chaque type d'antenne. Les types d'antenne non inclus dans cette liste,

ou dont le gain est supérieur au gain maximal indiqué, sont strictement interdits pour l'exploitation de l'émetteur